

PL60 Second battery control using LOAD terminal / G contacts

Second battery control using the PL60's voltage free G contacts requires different wiring to situations where the LOAD terminal is used. The 1st Solar panel leaves a regulated maintenance charge on the primary battery and can minimise excessive switching of the mechanical relay. Alternatively, a solid state relay could be used. Please refer to page 26 of the PL Reference Manual for more information. Note: Diagrams are for reference only. Wiring and fuses must be installed as specified by the relevant Australian Standards.

