
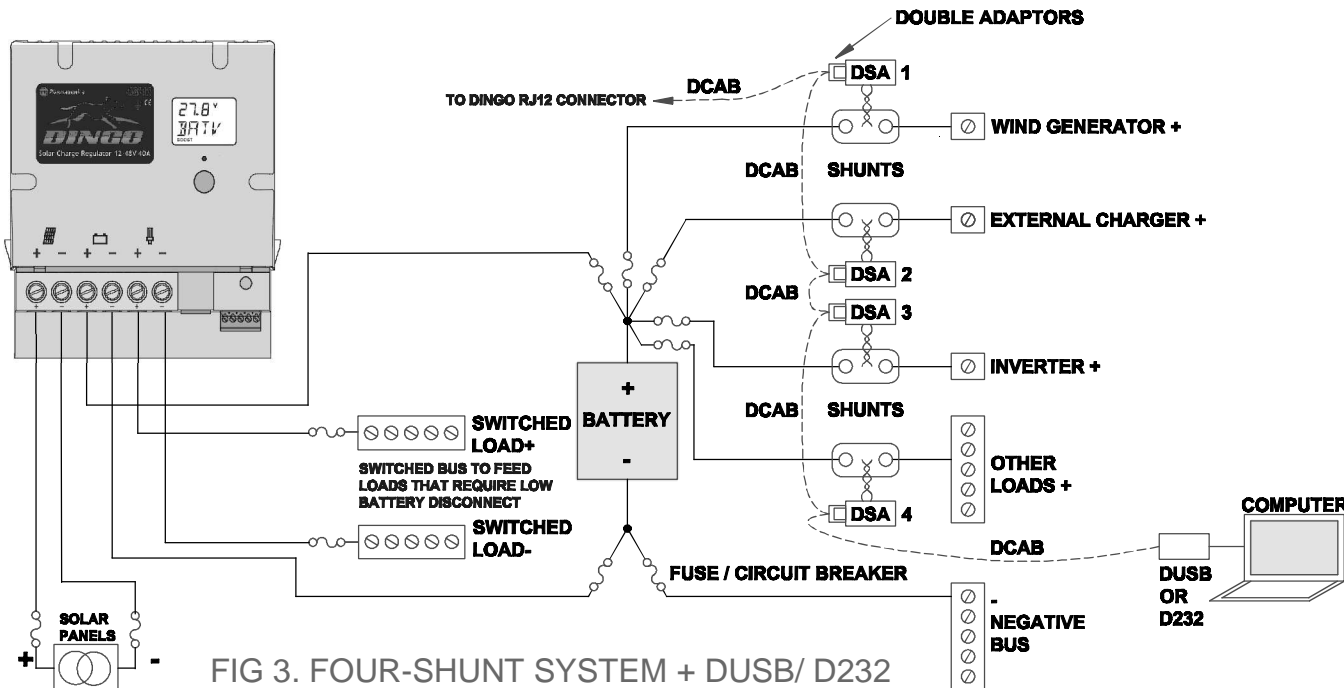
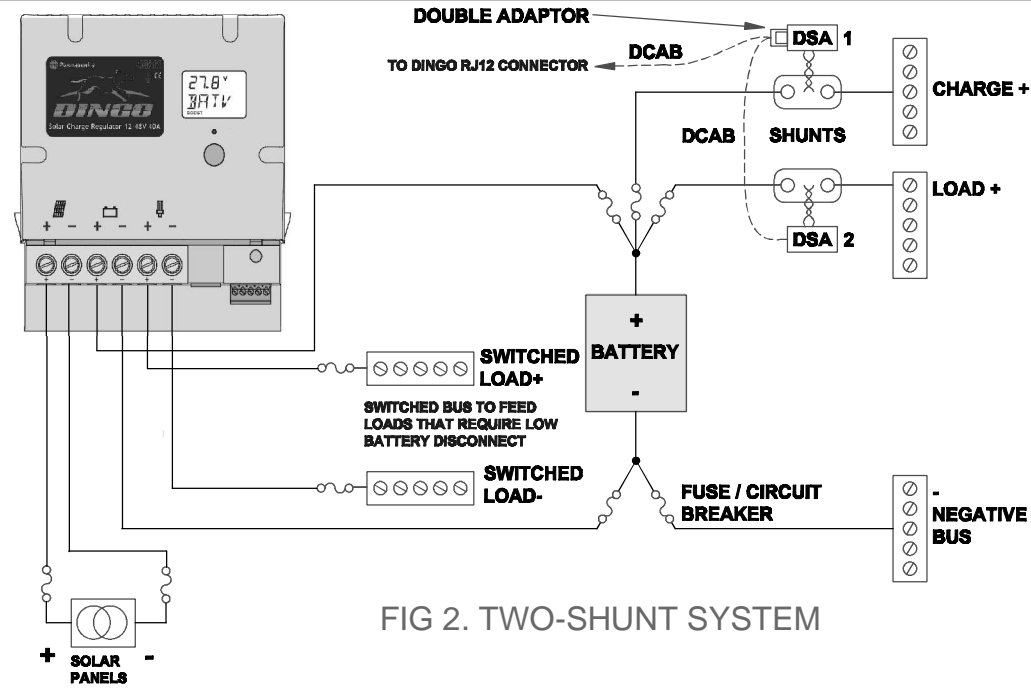


# DINGO 4040P TYPICAL INSTALLATION DIAGRAMS

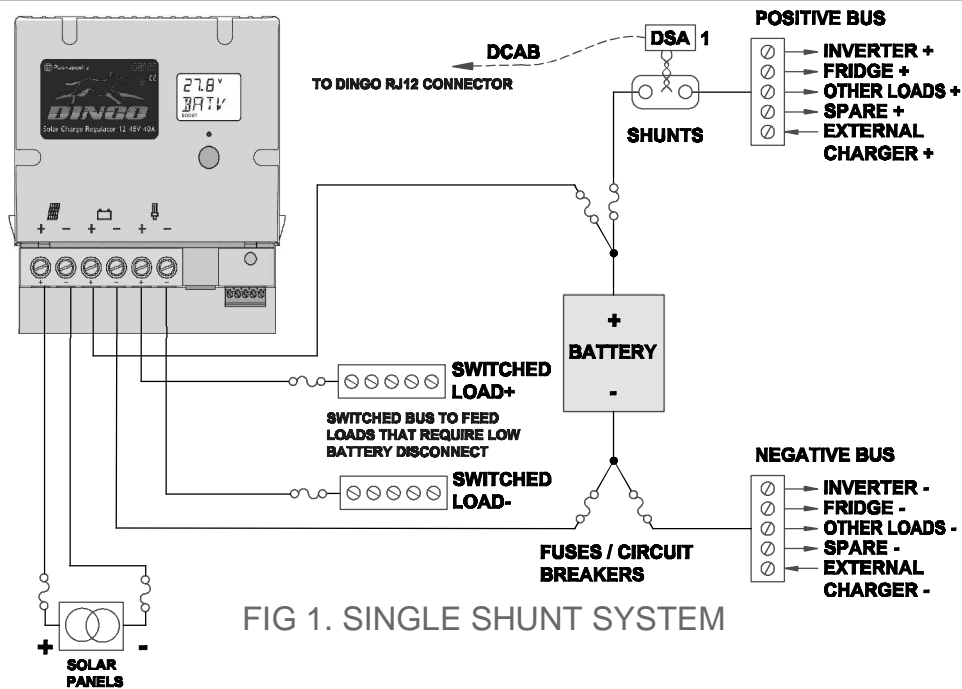

## NOTES

1. This diagram is for reference only.
2. Wiring and fuses etc. Must be installed as specified by the relevant Australian standards.
3. Maximum of four Dingo shunt adaptors (DSA) on the communications bus.
4. Each DSA must be set to a different address (1 - 4).
5. Shunts may be installed in the positive bus wire or the negative bus wire.
6. In FIG 1, DSA/Shunt reads 'balance' of load/charge current since some external charge current may be 'taken' by load and not go through shunt.
7. In FIG 2, DSA1 reads total external charge current and DSA2 reads total external load current.
8. In FIG 3, DSA1 reads wind generator charge current, DSA2 reads external charger current, DSA3 reads inverter load current and DSA4 reads other load currents.
9. DCAB is 6 core multi-strand, insulated cable with a black sheath.
10. Double adaptors (DA) are 6 pin 2 female 1 male RJ12 connectors.
11. Dingo 4040P is a positive ground device. The battery negative and solar panel negative must not be commoned together.
12. This controller is for DC current ONLY.
13. It is not an MPPT device (there is no voltage conversion).
14. Suitable array max power voltages are: 12V sys 16-19V, 24V sys 32-38V, 48V sys 64-76V.